




# Munchkinz Battery Replacement

Here is a guide if your battery doesn't work or doesn't charge.

Written By: Hee Jin Cho

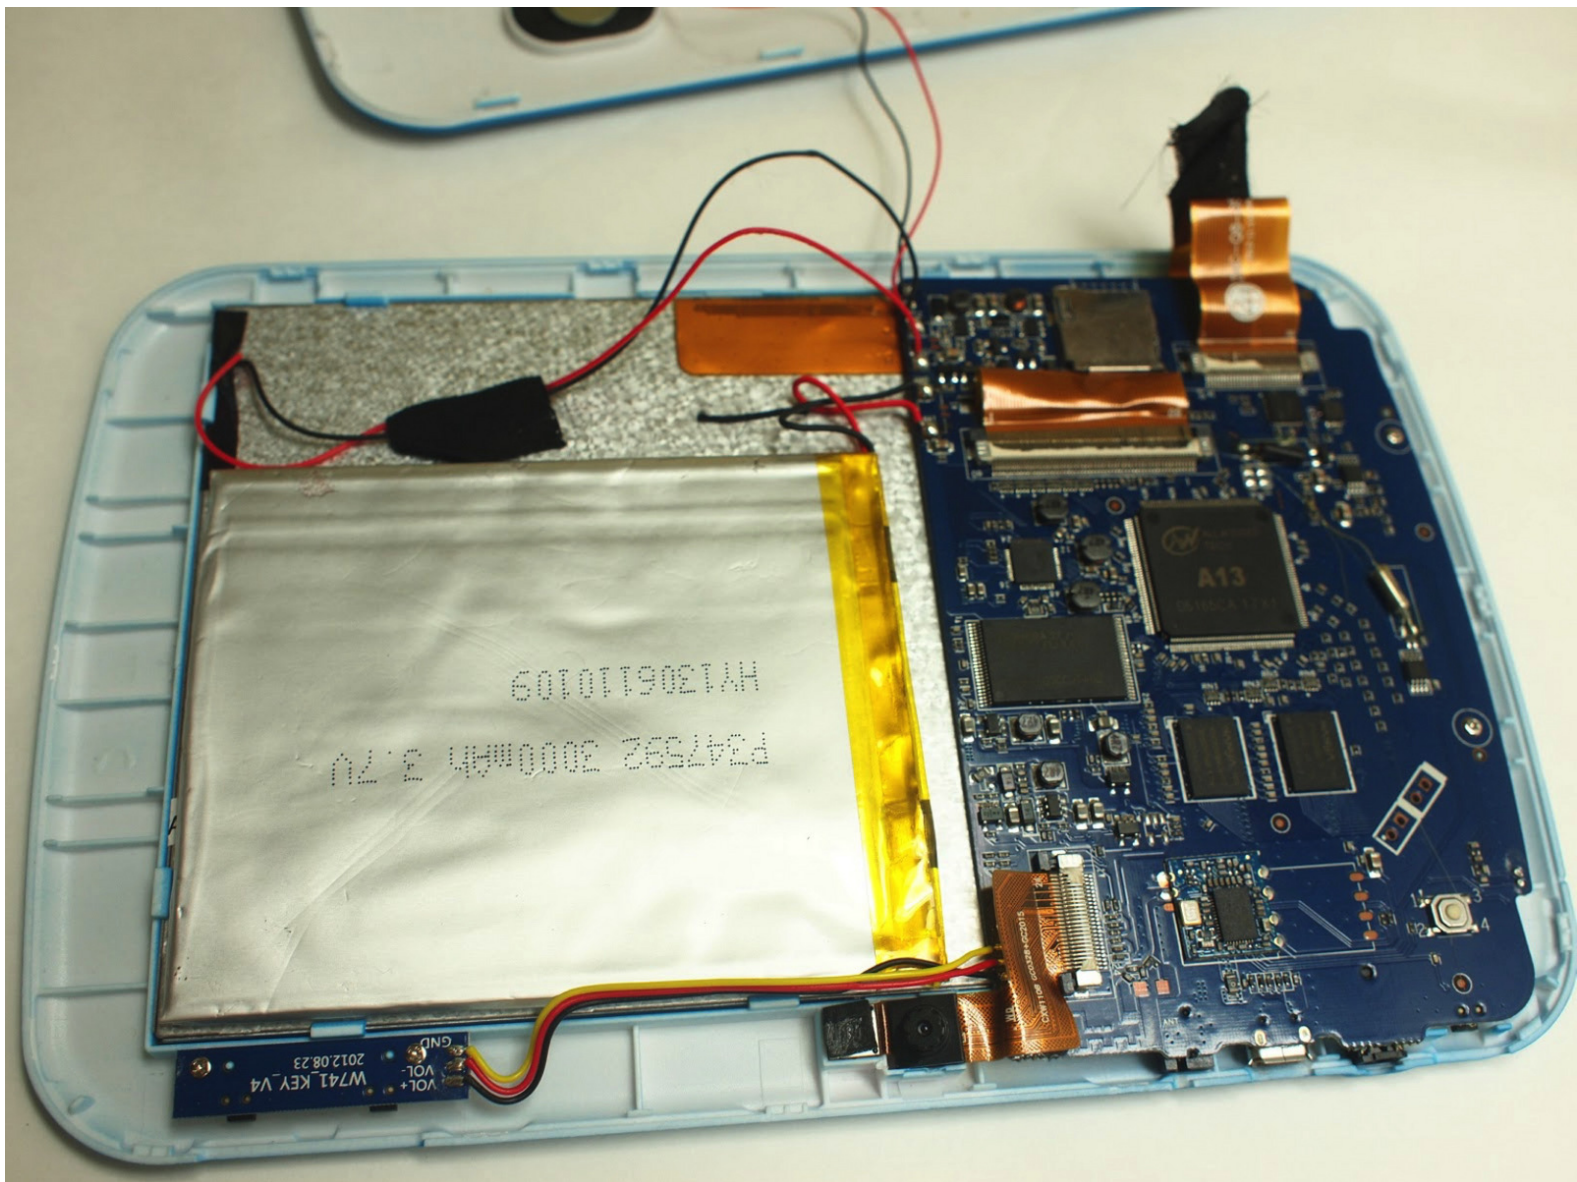

## INTRODUCTION


Display how to remove the battery.

---

### **TOOLS:**

- [iFixit Opening Tools](#) (1)
  - [Portable Soldering Iron](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
  - [Spudger](#) (1)
-


## Step 1 — Opening Device

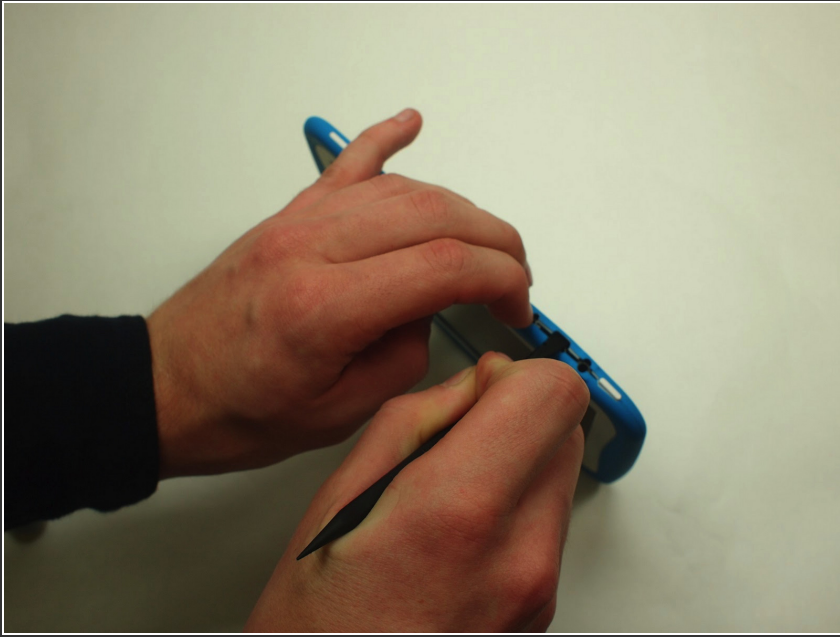

- Insert spudger into the USB Micro slot and pry the case apart.

⚠ Be careful not to go too deep and bend the prong inside the Micro USB port.

## Step 2 — Pry Device Apart

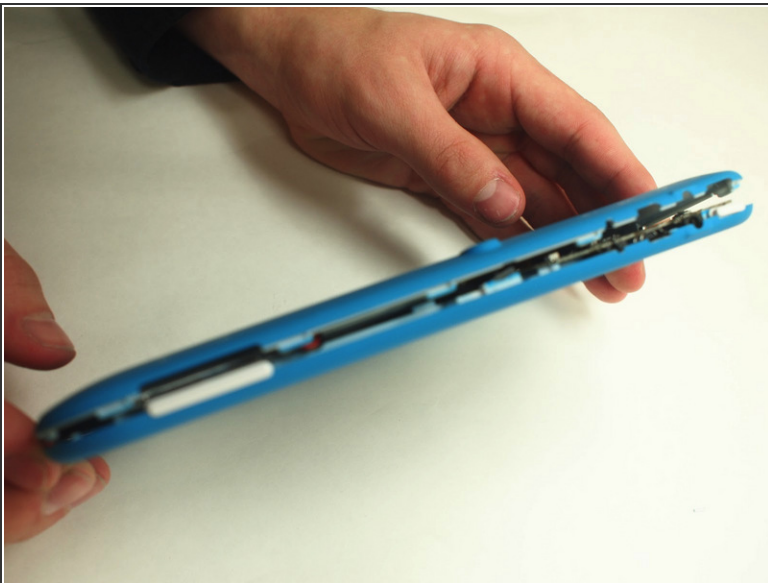

- Slide the wide plastic opening tool across the seam, separating it if you can't pry the device open using just the spudger.

⚠ Gently separate the case so none of the cords inside are disconnected






## Step 3 — Separated Device



- After prying the device apart, it should look like this.

## Step 4 — Removing battery

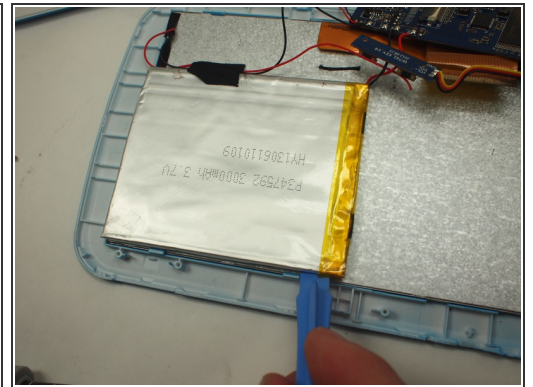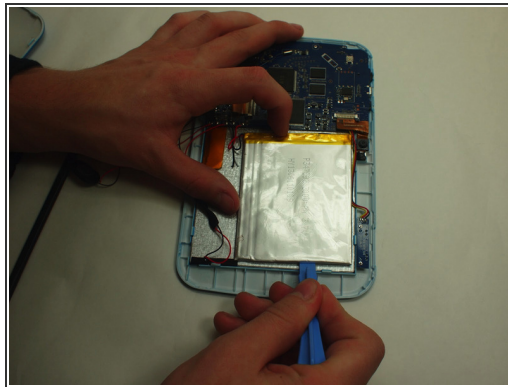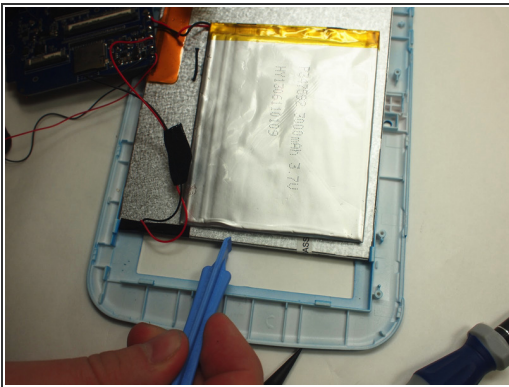

- Use the wide plastic opening tool to slowly pry each side of the battery up.

⚠ Be careful not to bend the battery too much.

## Step 5 — Remove battery completely



- Use the Soldering Iron to disconnect the each cable.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-27 04:06:11 AM.